 


Nest Easel



781P, 785P, 785E-DD

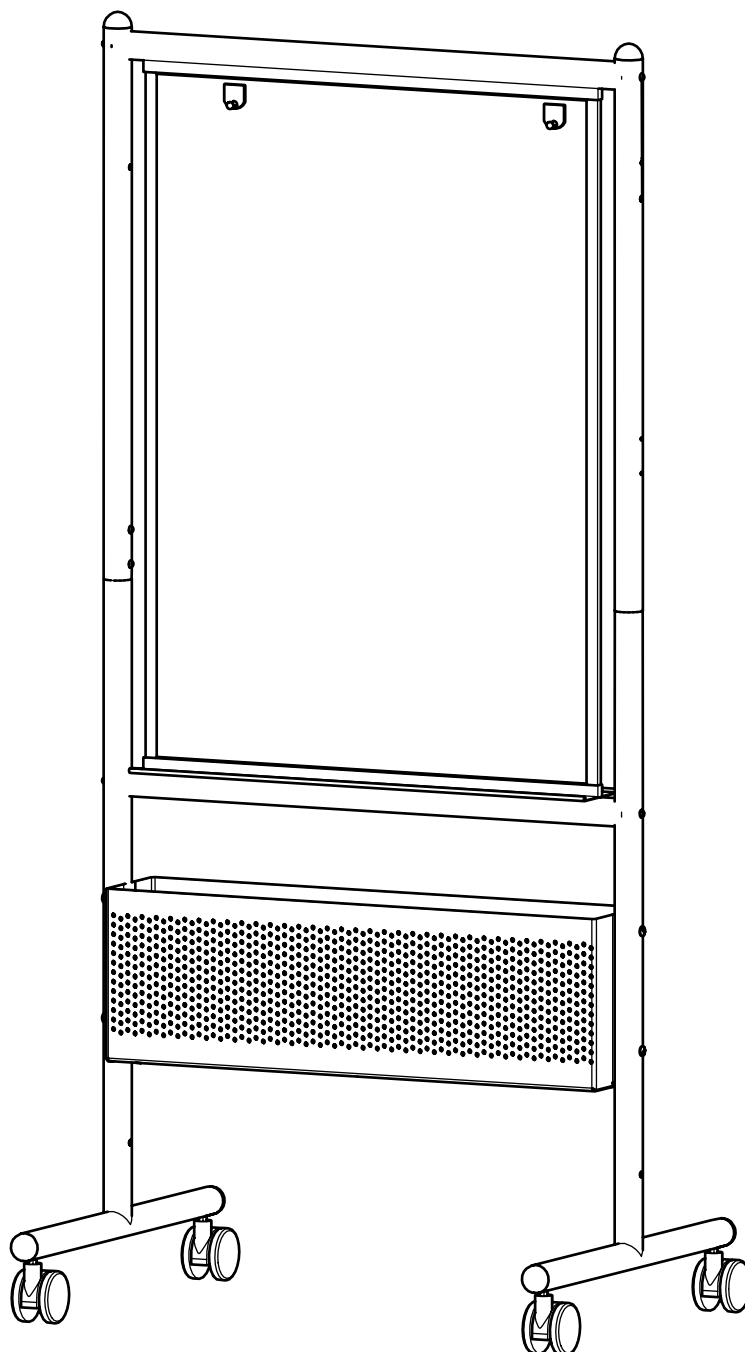

ASSEMBLY INSTRUCTIONS
DO NOT THROW AWAY!

 


INSTRUCCIONES DE ENSEMBLAJE
NO LA TIRE

INSTRUCTIONS DE MONTAGE
NE PAS JETER


Parts List

P1 - Board

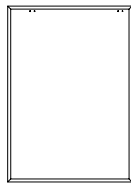

x1

 P2 - Lower Leg

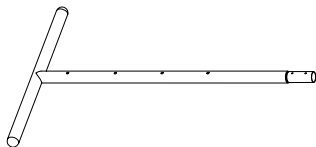

x2

P3 - Upper Leg



 
x2

P4 - Middle Tray




x1

P5 - Top Support

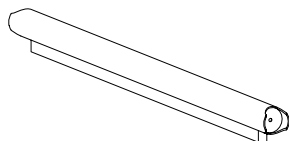


x1

 P6 - Book Rack Front

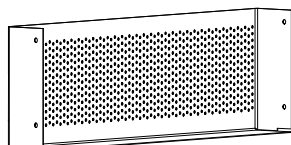

x1

 
P7 - Book Rack Back

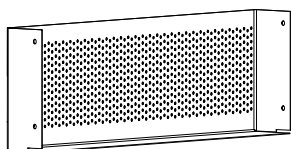

x1

Hardware

 A - M6 x 15mm Screw



x5

B - M6 x 30mm Screw



 
x5

C - M6 x 60mm Screw




x5

D - M6 Interior Threaded Post



x5

 E - 2" Locking Casters




x4

F - Flip Chart Hook




x4

 G - Plastic Reciever




x4

 H - #10 - 1" Wood Screws



x4

 I - #10 - 1/2" Wood Screws




x4

J - Allen Wrench



x2

 K - Caster Wrench



x1

WARNINGS AND DISCLAIMERS

Review full assembly instructions and check that all parts are present before beginning assembly. Heavy or large furniture may require multiple persons in order to properly assemble. If you have questions regarding assembly, contact the manufacturer before continuing. Damage due to incorrect assembly may not be covered by warranty. Do not use product unless all screws are tight. Check all screws for tightness at least every six months. If parts are broken, missing, damaged, or worn, stop use of the product until repairs are made by your dealer using factory authorized parts.

WARRANTY

For full product warranty details, please visit:

Para obtener información sobre la garantía del producto, consulte este sitio (ingles):

Pour plus d'informations sur la garantie du produit, consultez ce site (anglais):

<http://moorecoinc.com/warranty>

CARE & MAINTENANCE

For questions on assembly or missing/damaged parts, please contact us using the following information.

Para preguntas sobre el ensamblaje o piezas faltantes o dañadas, por favor contáctenos usando la siguiente información.

Pour toute question sur le montage l'assamblage manquantes ou endommagées, veuillez nous contacter en utilisant les l'information ci-dessous.

Email:

support@moorecoinc.com

Phone:

1.800.749.2258

(Monday - Friday, 8AM - 5PM
Central Time)

PRODUCT REGISTRATION

To register your product for warranty, please visit:

 
Para registrar la garantía del producto, vea este sitio (en ingles):

Pour enregistrer la garantie de votre produit, consultez ce site (en anglais):

<https://moorecoinc.com/register>


STEP 1

Attach Middle Tray (P4) to two (2) Lower Legs (P2) at desired height using two (2) M6 x 60mm Socket Screws (C).

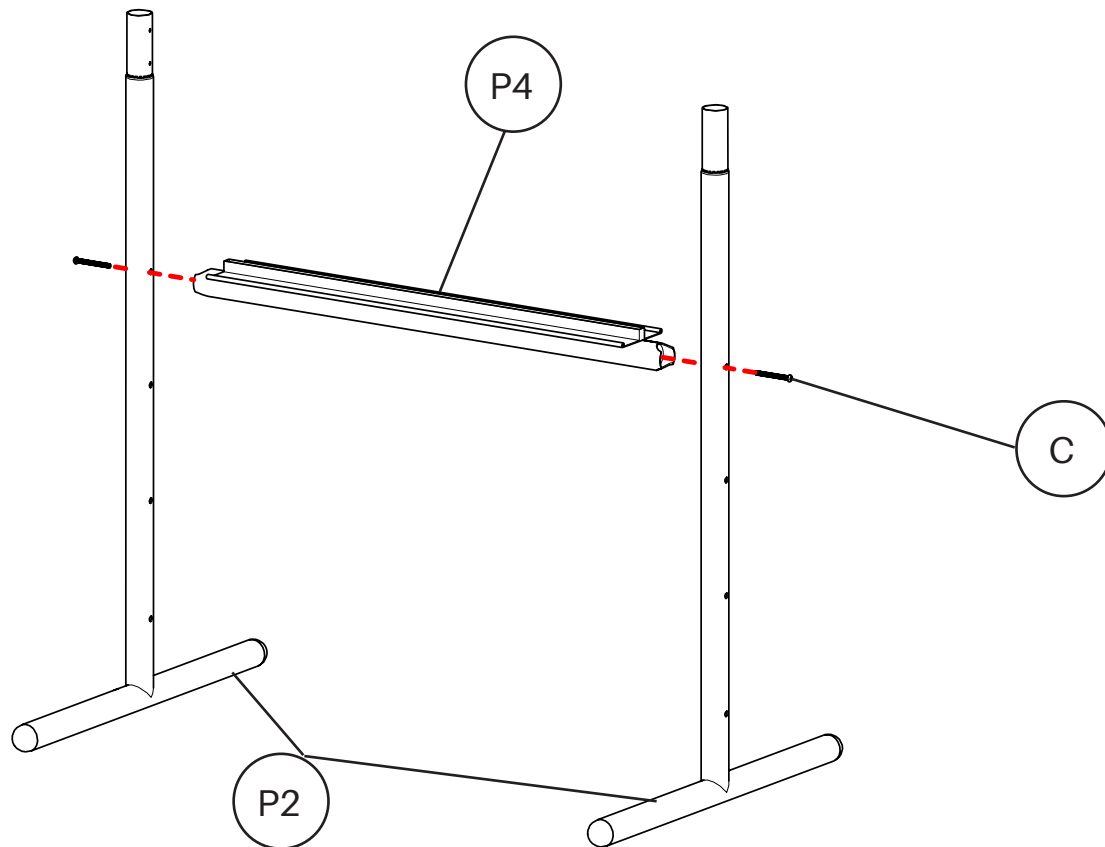


STEP 2

 Attach each of the Upper Legs (P3) to the each of the Lower Legs (P2) using four (4) M6 x 15mm Socket Screws (A).

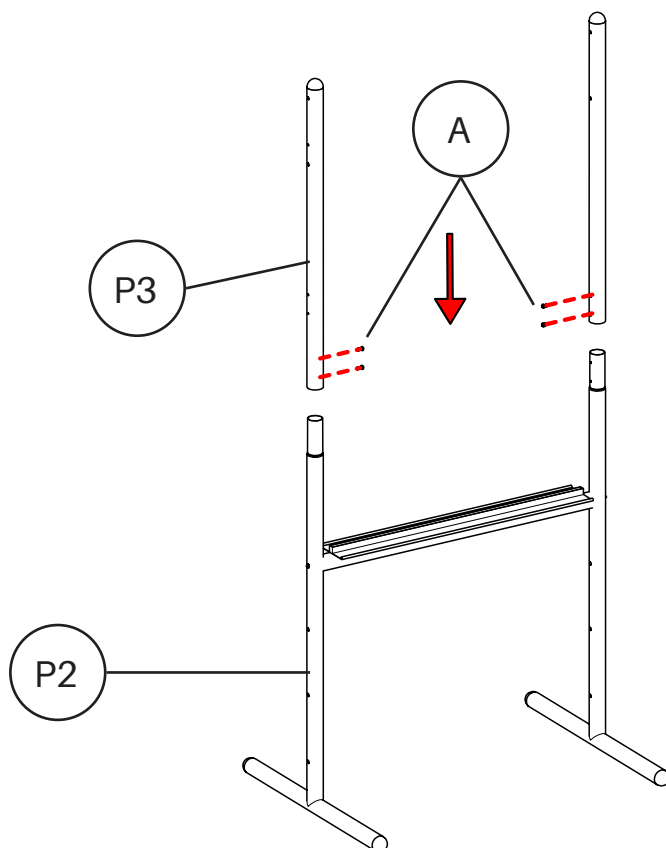


STEP 3

 Insert Markerboard (P1) into Middle Tray (P4). Make sure the four small holes on marker board are on the top.

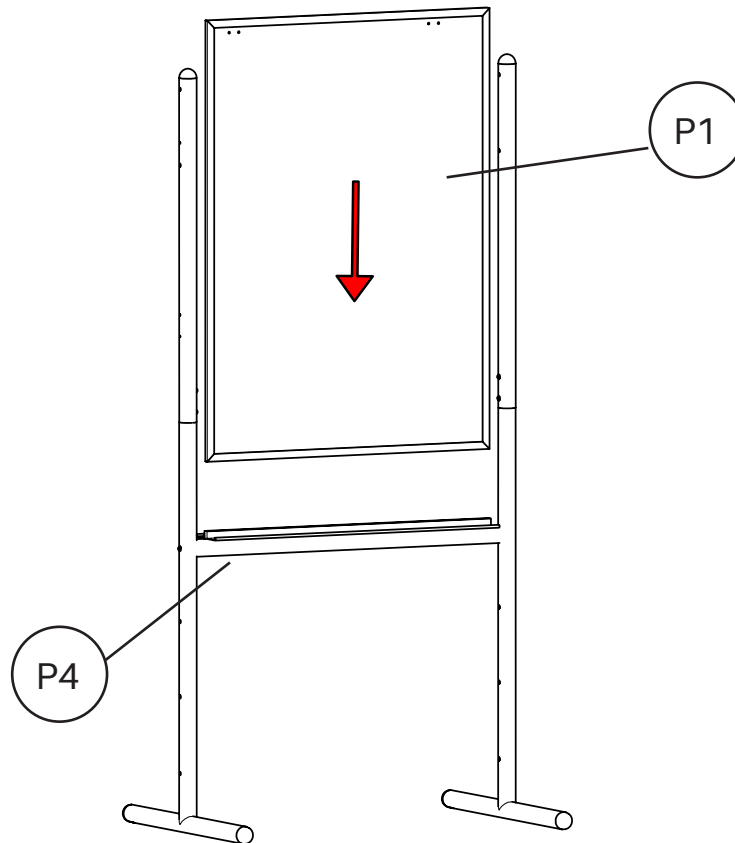


STEP 4

 Slide Top Support (P5) over Markerboard (P1) and secure to the two Upper Legs (P3) using two (2) each M6 x 60mm Socket Screws (C).

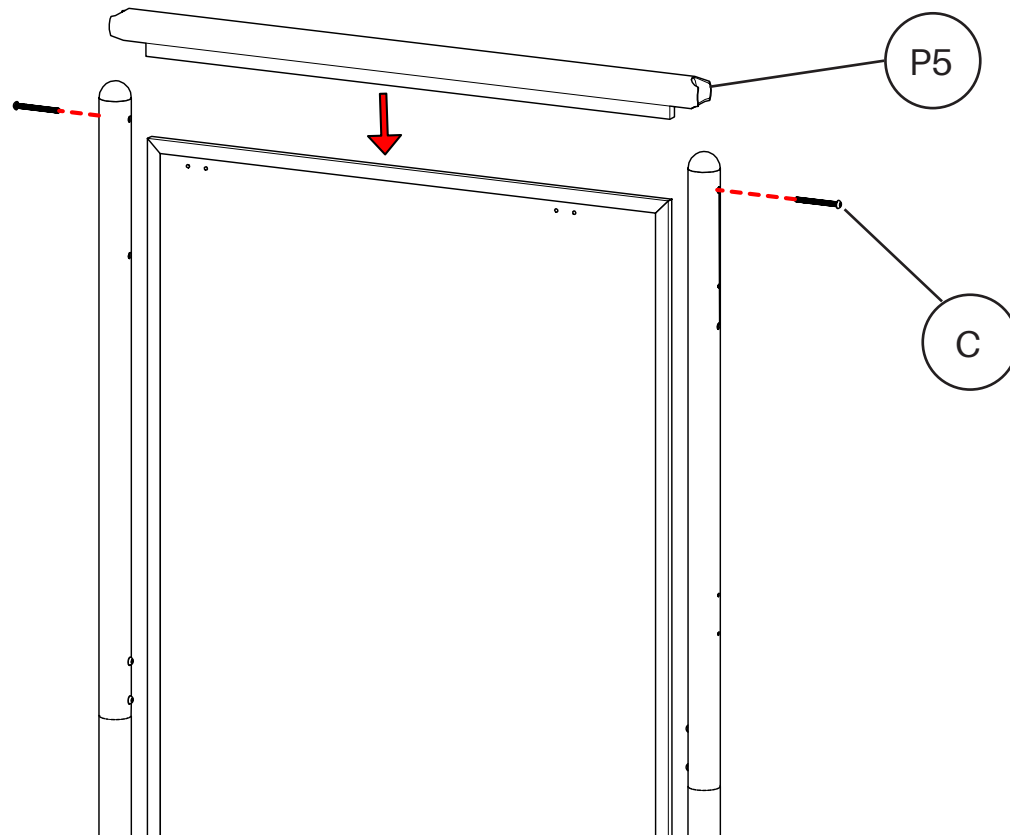


STEP 5

 Attach Book Rack Front Panel (P6) and Book Rack Back Panel (P7) to the two Lower Leg Frames (P2) using four (4) M6 x 30mm Socket Screws (B) and four (4) M6 Interior Threaded Posts (D).

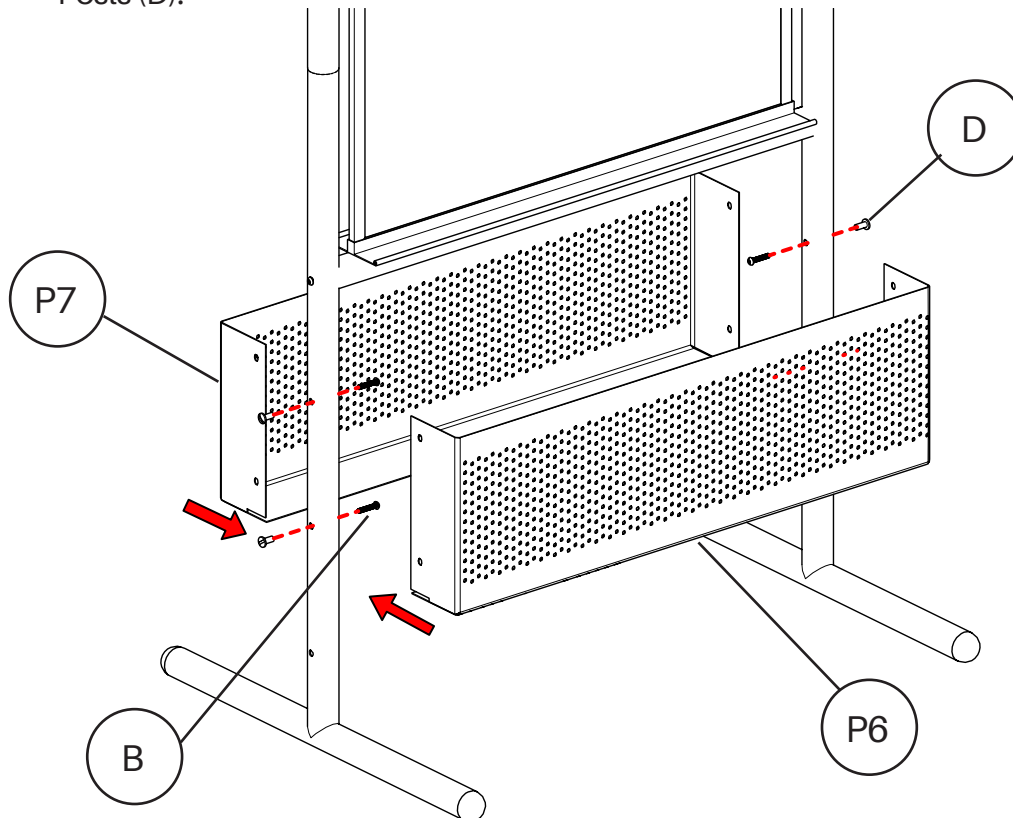


STEP 6

 Attach all four (4) Locking Casters (E) to the lower legs. Tighten the Casters using Caster Wrench (K).

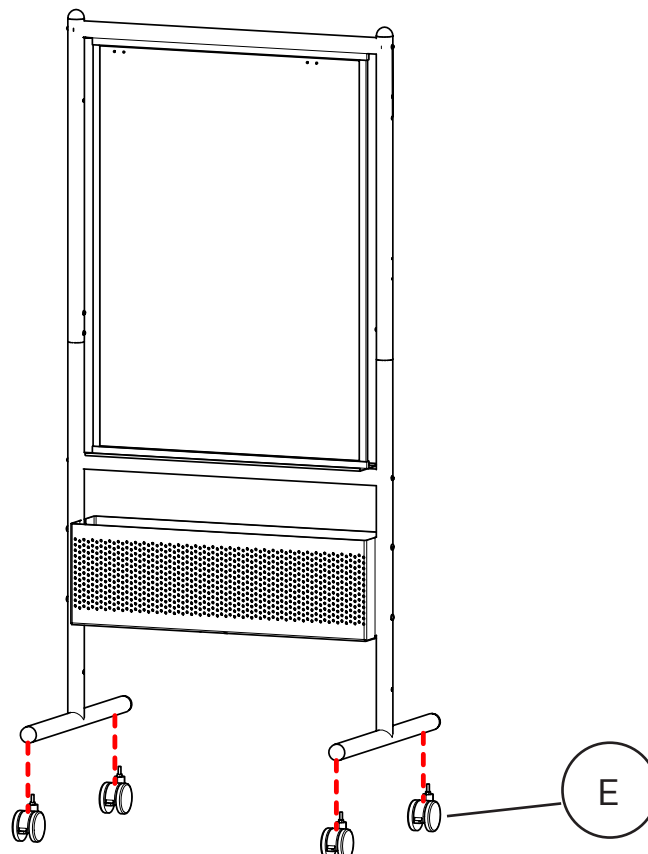


STEP 7

 
Peel the paper from the back of adhesive pad on Plastic Chart Support (F). Attach 2 Plastic Chart Supports on each side of board. Insert 2 pins on back side of Chart Support (F) through holes in markerboard (P1).

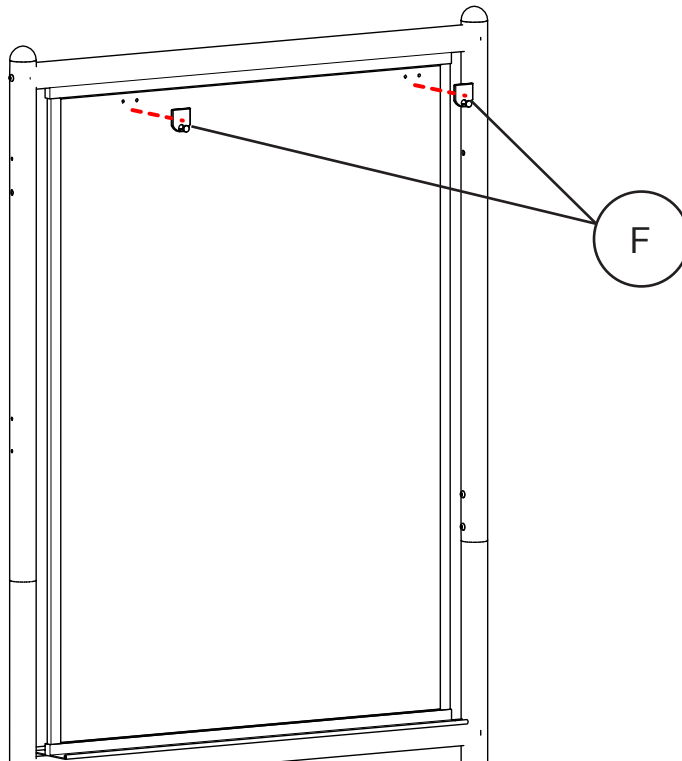

Complete

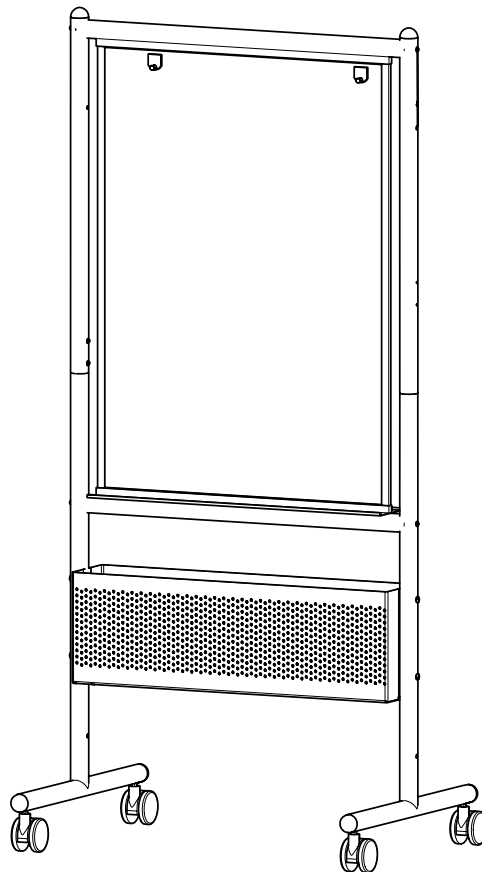 

THIS COMPLETES ASSEMBLY INSTRUCTION

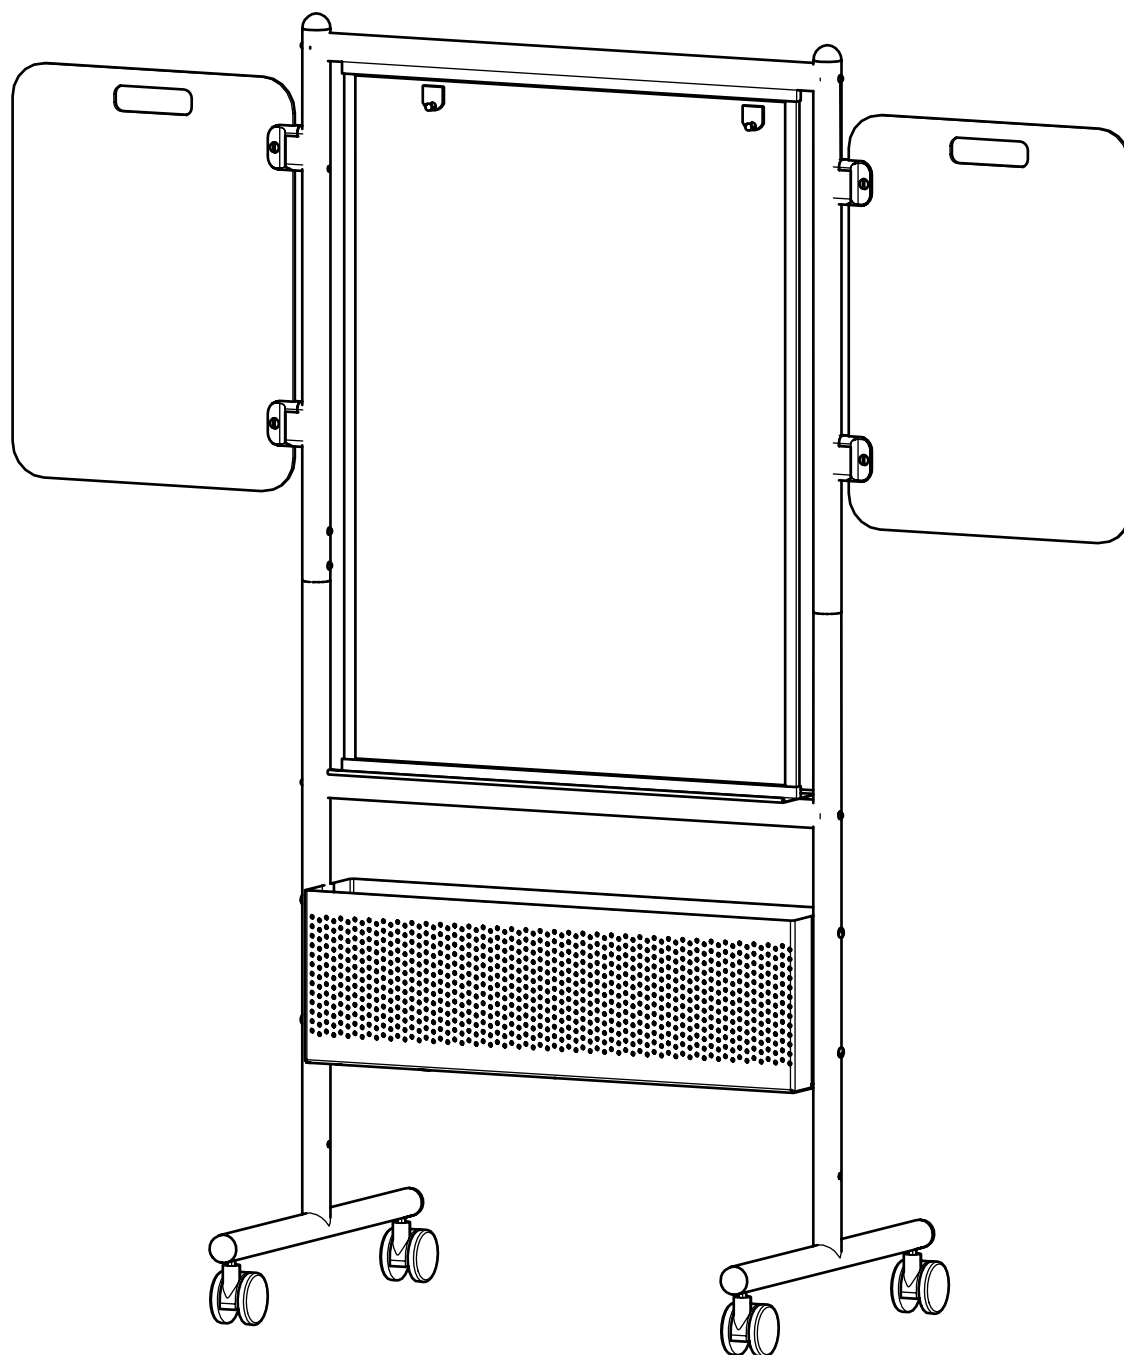 


INSTRUCCIONES DE ENSEMBLAJE
NO LA TIRE

INSTRUCTIONS DE MONTAGE
NE PAS JETER


Parts List

 P1A - Wing Panel

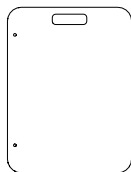

x2

 
P2A - Plastic Hanger



x4


Hardware

 A1 - M6 x 15mm Screw



x4

 
B1 - M6 Interior Threaded Post



x4


STEP 1

 With hardware from Nest Easel, screw two Plastic Reciever (G) onto the outside of the Upper Legs (P3) with two #10 - 1" Wood Screws (H) and two #10 - 1/2" Wood Screws (I). Repeat with the other side of the whiteboard.

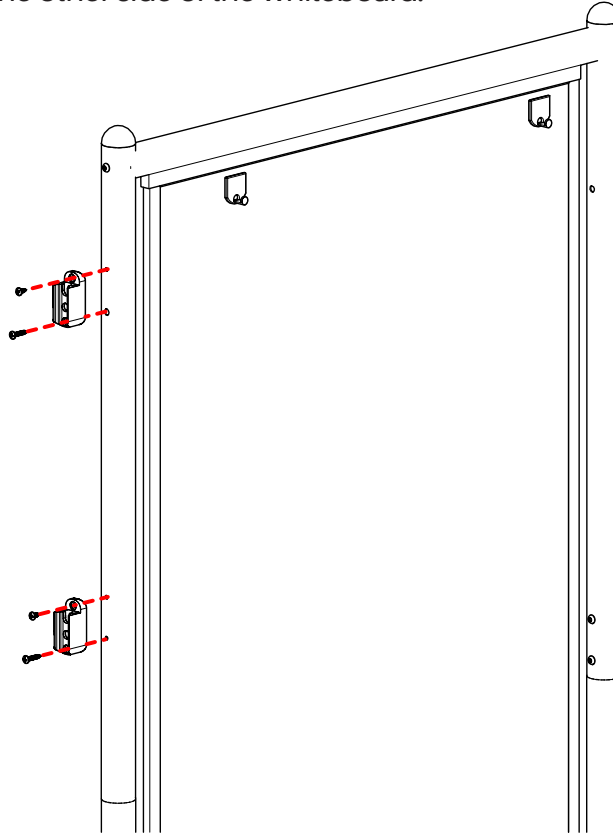


STEP 2

 Attach two Plastic Hangers (P2A) to the side of the Wing Panel using two (2) M6 Interior Threaded Post (B1) and two (2) M6 x 15mm Socket Screws (A1).

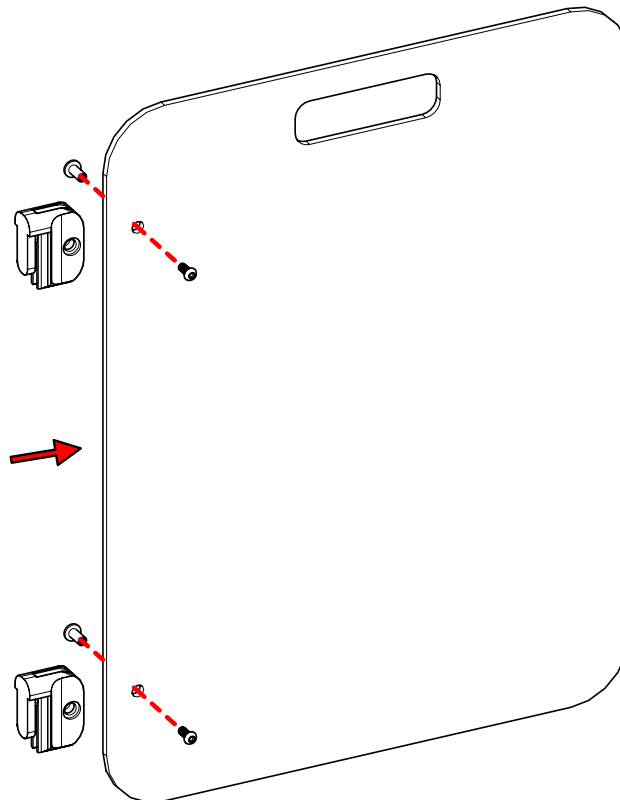


STEP 7

 Peel the paper from the back of adhesive pad on Plastic Chart Support (F). Attach 2 Plastic Chart Supports on each side of board. Insert 2 pins on back side of Chart Support (F) through holes in markerboard (P1).

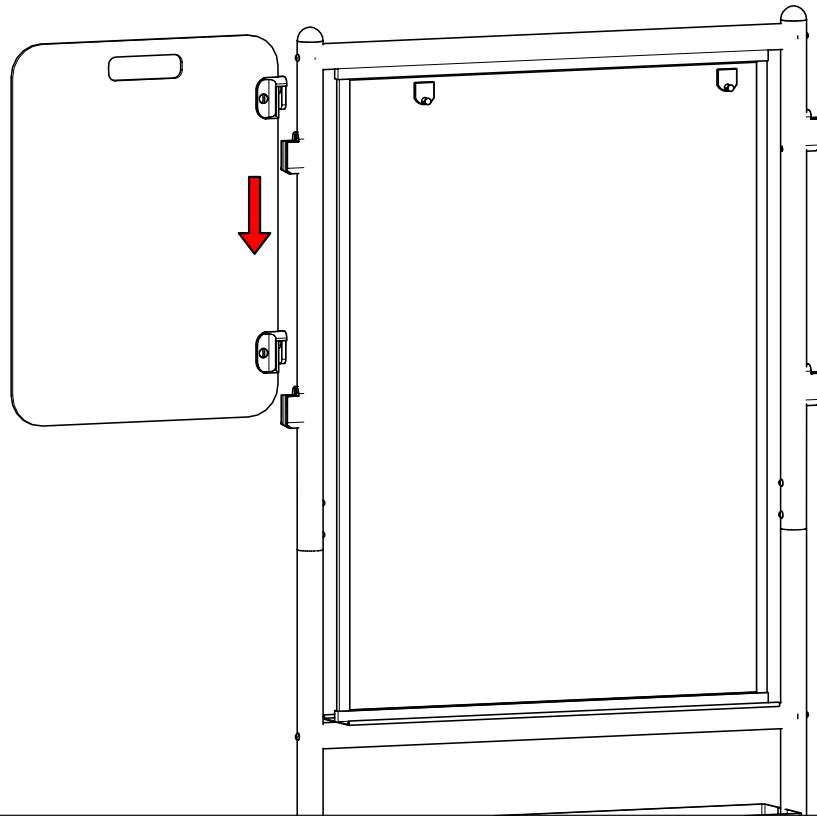

Complete

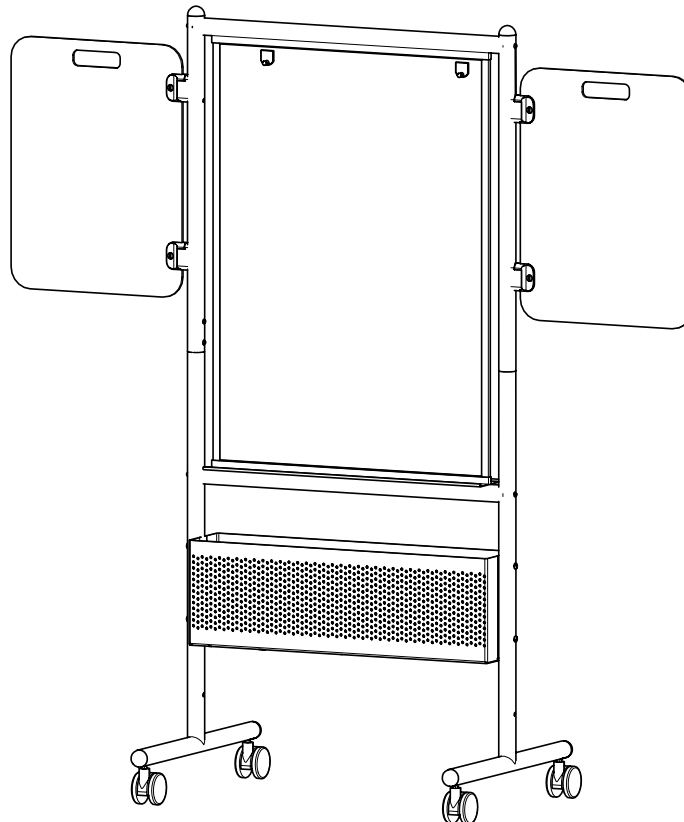 

THIS COMPLETES ASSEMBLY INSTRUCTION