


91124 Tablet Side Table

Assembly Instruction

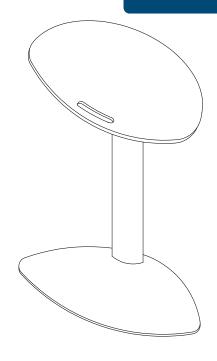


 Place the Top (P1) upside down on a padded surface. Connect the Inner Support (P3) using four M6 Screws (B). Use Allen Wrech (D) to tighten.

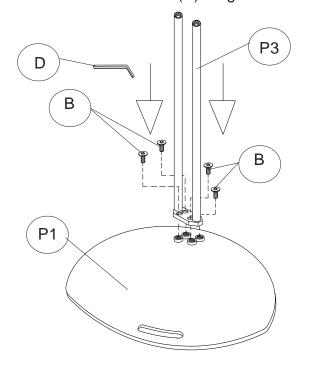


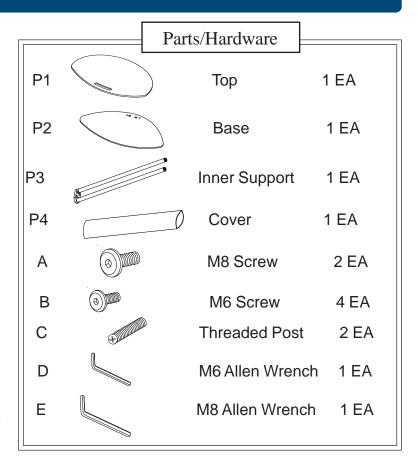

2. Place Cover (P4) down over the Inner Support (P3).

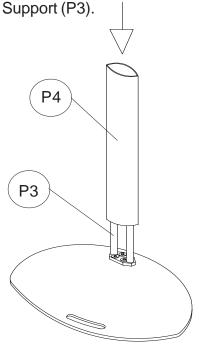

3. Screw in two Threaded Post (C) into the Base (P2). The Threaded Posts are used to keep the Cover centered.

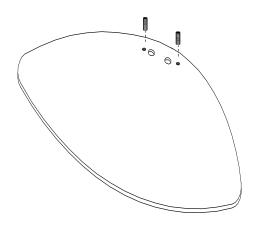

Place the Threaded Posts in the Base inside the corners of the Cover (P4).
 Secure the Base (P2)
 to the Inner Support (P3) using two
 M8 Screws (A). Tighten Screws with Allen Wrench (E).

